



## Pre-Filter Fitting Instructions

Nissan Patrol 3.0 Ltr CR  
(2007 on)




### IMPORTANT: Before Starting

- ❑ Ensure the engine bay is clean and free from contaminants.
- ❑ The Fuel Manager unit has arrows which indicate flow located under the ports.
- ❑ Install all fittings and plugs into the filter assembly using a suitable thread paste such as Permatex Thread Sealant 592914.

Kit Part No: FM619DPK

### INSTRUCTIONS

1. The Direction Plus bracket fits to the firewall side of the black bracket on the passenger side guard. (inset photo). The bracket mounts using the top clamp bolt for the air conditioner pipe, as well as two other holes in the bracket. On some applications, it may be required to drill new holes in the Direction Plus bracket. Use the 6mm bolts and nyloc nuts to secure this bracket.
2. Mount the Fuel Manager assembly to the bracket.
3. Install all fittings and plugs into the filter assembly using a suitable thread paste such as Threebond 1110B. Note the direction of flow in the head.
4. Remove the flexible fuel hose from the inlet side of the original filter and connect the hose using the hose clamp provided to the Fuel Manager.
5. Connect the outlet pipe of the Fuel Manager filter to the inlet pipe of the original filter and use the clamps provided.
6. Pump the hand primer until it goes firm, the fuel system is now bled and the engine is ready to start.

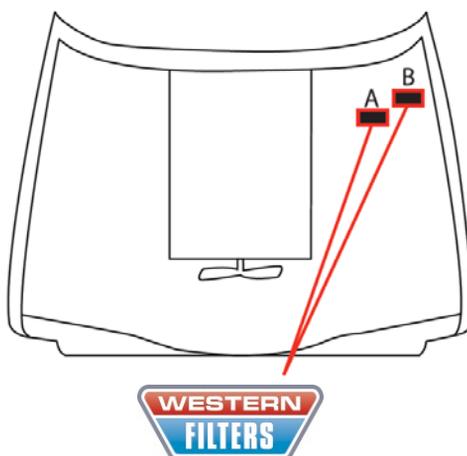

### KIT CONTENTS

1. Fuel Manager 30 micron Filtration Unit
2. Mounting Bolts, Washers and Nyloc Nuts
3. Spare 30 Micron Replacement Filter
4. 4mtr 3/8" Quality Fuel Hose
5. Direction Plus Filter Bracket
6. 3/8" Straight Barb Fittings
7. Blanking Plugs
8. Hose Clamps



P: (02) 9831-1715 | F: (02) 9671-2212 | E: enquiries@westernfilters.com.au | W: www.westernfilters.net.au  
45 Forge St, Blacktown NSW 2148 | Mon-Fri: 7:00am – 5pm / Sat: 7:00am – 12pm

