



Use this guide to assist in the installation of the Western Filters, Fuel Manager Pre-Filter Kit. This kit will only fit the stated vehicle. Although these kits are aimed at DIY enthusiasts, we suggest the inexperienced organise a mechanic to carry out the installation.

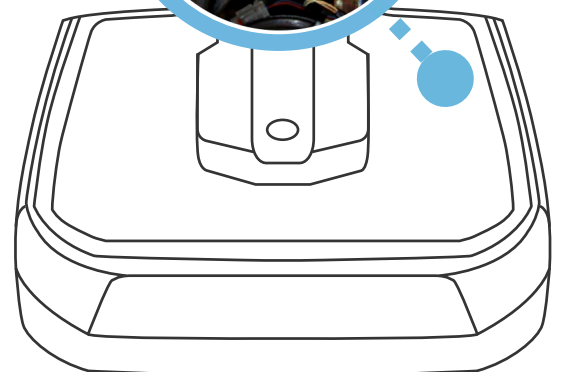
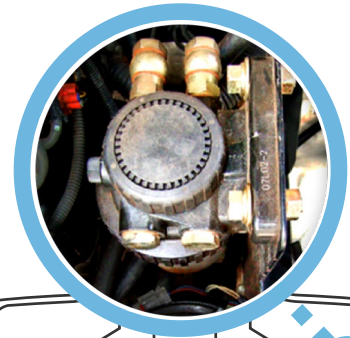
BEFORE STARTING: PLEASE READ THIS IMPORTANT INFORMATION

- Ensure the engine bay is clean and free from contaminants.
- The Fuel Manager unit has arrows which indicate flow located under the ports.
- Install all fittings & plugs into the filter assembly using a suitable thread paste such as Permalock Thread Sealant.

**** Kit contents may change due to refinement or parts availability.**

Fitting Instructions:

1. Remove the original filter bracket completely.
2. Remove the 2x bolts which are holding brackets on the innerguard.
3. Using the original bolts, mount the new filter bracket in place.
DO NOT tighten until all bolts have been installed.
4. Mount the original filter to the new bracket.
5. Mount the Fuel Manager filter unit to the new bracket. The filter unit may be mounted on either side. Beware of an aluminium vacuum pipe on the engine side.
6. Install all fittings and plugs into the filter assembly using thread paste. Note the direction of the flow by the arrows located under the ports.
7. Remove the flexible fuel hose from the inlet side of the original filter. Connect the supply hose to the inlet of the Fuel Manager using one of the clamps.
8. Connect the outlet pipe of the Fuel Manager to the inlet pipe of the original filter using the hose and hose clamps provided.
9. Pump the hand primer until it goes firm. The fuel system is now bled and the engine is ready to start.

**Single Battery Setup****Double Battery Setup****FM612DPK****FUEL MANAGER[®]**
FITTING INSTRUCTIONS**FM612DPK Kit Contains:**

- 1x Fuel Manager 100 30 Micron Filter Assy
- 1x Vehicle Specific Bracket
- 1x Fuel Line Rubber 10mm DFL10
- 2x NPT Straight 10mm
- 2x NPT Plug 1/4" DP733-04
- 2x Push-on 90° 10mm
- 2x Hose Clamp 10mm
- 2x Bolts with Nuts
- 4x Washers