

MITSUBISHI Triton ML MN**2006-09 ML 3.2L 4M41****2008-15 MN 2.5L 4D56**

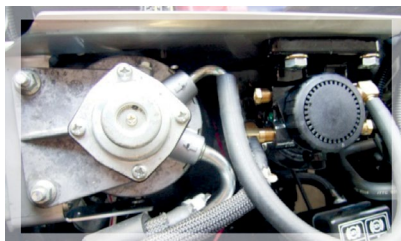
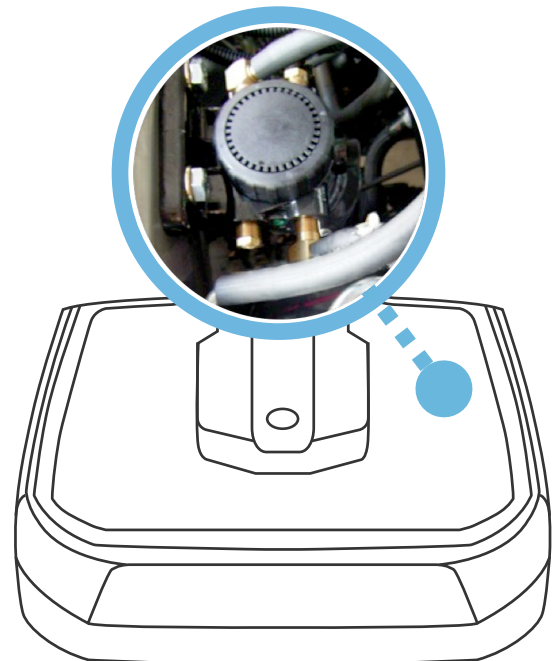
Use this guide to assist in the installation of the Western Filters, Fuel Manager Pre-Filter Kit. This kit will only fit the stated vehicle. Although these kits are aimed at DIY enthusiasts, we suggest the inexperienced organise a mechanic to carry out the installation.

BEFORE STARTING: PLEASE READ THIS IMPORTANT INFORMATION

- Ensure the engine bay is clean and free from contaminants.
 - The Fuel Manager unit has arrows which indicate flow located under the ports.
 - Install all fittings & plugs into the filter assembly using a suitable thread paste such as Permalock Thread Sealant.
- ** Kit contents may change due to refinement or parts availability.**

Fitting Instructions:

1. Remove the 12mm fuel hose (larger of the 2 hoses) connected to the factory filter.
 2. Remove the 2x retaining nuts on top of the factory filter. Remove all electrical plugs and solenoids from the original OEM bracket.
 3. Before setting the Fuel Manager (FM) Bracket inplace, attach the solenoid to the FM Bracket first, using the 6mm bolts and nuts supplied.
 4. Install the 90 degree elbows and male fittings and blanking plugs to the FM unit using a sealing paste. Mount the FM unit to the Bracket and then the Bracket to the vehicle.
 5. Install the Bracket under the factory filter and refit the filter and Bracket retaining nuts. Refit all electrical plugs in to slots provided in the Bracket.
 6. Attach the from the tank line to the Inlet of the FM unit, secure with clamps. Connect hose and clamps from the Outlet of the FM to the Inlet of the original filter.
- Note: Ensure the hose is not kinked and secured appropriately.**
7. Pump the hand primer until it goes firm, the fuel system is now bled and the engine is ready to start.
 8. Check the whole system for leaks.

**FM622DPK****FUEL MANAGER[®]**
FITTING INSTRUCTIONS**FM622DPK Kit Contains:**

- 1x Fuel Manager 100 30 Micron Filter Assy
- 1x Vehicle Specific Bracket
- 1x Fuel Line Rubber 12mm DFL12
- 1x Thread Sealant 6ml
- 2x 1/4" NPT Straight 12mm
- 2x 1/4" NPT Plug DP733-04
- 2x Push-on 90° 12mm
- 2x Hose Clamps 12mm
- 1x 2xBolts 2xNuts 4xWashers
- 2x Zinc Bolts 6x25mm
- 2x Nyloc Nuts 6mm
- 2x Washers 6mm